

Gummi-Metall-Puffer


Gummi-Metall-Puffer, Ausführung B

Abkürzungen:

d = Durchmesser
h = Höhe
g = Gewinde
l = Gewindelänge
s = Gewindetiefe

Gummi-Shor ehärte:

weich = $43^\circ \pm 5$ Shore A
mittel = $57^\circ \pm 5$ Shore A
hart = $68^\circ \pm 5$ Shore A

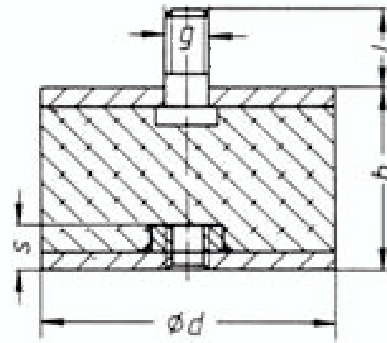

Artikel-Nr.	d in mm	h in mm	g in mm	l in mm	s in mm
0500...	08	06	M 3	06	3
0224	08	08	M 3	06	3
0226	10	10	M 4	10	4
0241	15	15	M 4	13	4
0247	15	20	M 4	13	4
0255	20	15	M 6	15	6
0262	20	20	M 6	15	6
0269	20	25	M 6	15	6
0279	25	15	M 6	18	6
0288	25	20	M 6	18	6
0295	25	30	M 6	18	6
0299	30	15	M 8	20	8
0305	30	20	M 8	20	8
0315	30	30	M 8	20	8
0329	40	30	M 8	23	8
0334	40	40	M 8	23	8
0343	50	20	M 10	28	10
0352	50	30	M 10	28	10
0360	50	40	M 10	28	10
0364	50	45	M 10	28	10
0368	50	50	M 10	28	10
0375	70	45	M 10	30	10
0380	75	25	M 12	37	12
0385	75	40	M 12	37	12
0390	75	50	M 12	37	12
0393	75	55	M 12	37	12
0400	100	40	M 16	45	16
0408	100	55	M 16	45	16
0414	100	60	M 16	45	16